


5 Toggle Machine Control on your tractor and lay the run

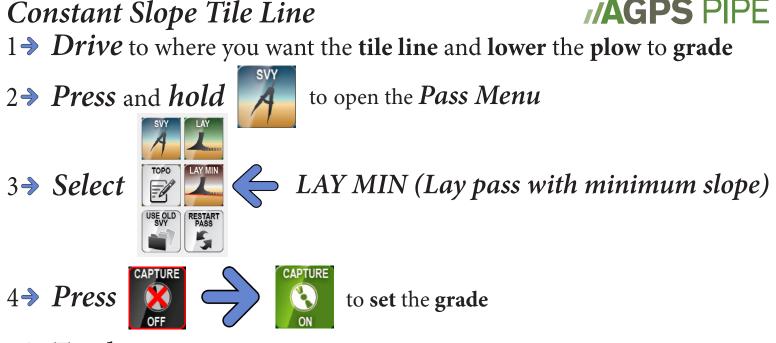

when *done* to **start** a new **run**



5 Toggle Machine Control on your tractor and lay the tile

Adjust the **slope** with the **min slope buttons**

LAY MIN

6→ Press



to start a different tile line